
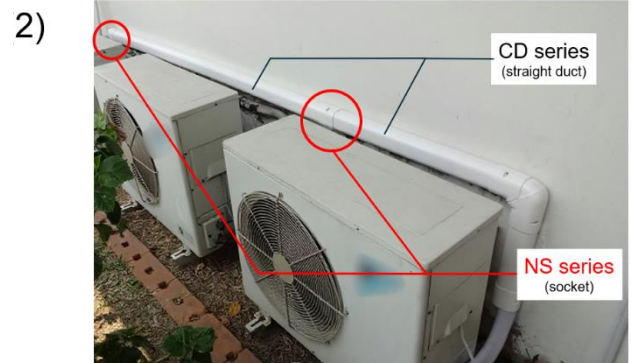


Precaution for Horizontal CLEANDUCT Installation

1. How to Install

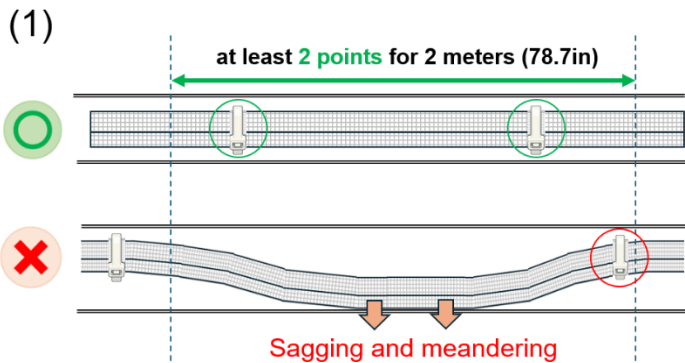

- (1) Not to apply stress to straight duct by sagging and meandering of pipes.
Fix pipes **at least 2 points for 2 meters (78.7in)**. (Recommendation)
- (2) For outdoor horizontal runs, keep the piping **as short as possible** and **use socket fittings** to help maintain support and alignment.

【 Precautions for Installation Location 】

1. Keep CLEANDUCT away from heat-retaining walls and reflective paint.
2. Avoid poorly ventilated areas and heat-generating equipment.
3. Keep CLEANDUCT away from metal eaves and structures.

2. WHY IS IT IMPORTANT?

If the surface temperature of CLEANDUCT **exceed 60°C**, deformation may occur. Particularly, when the CLEANDUCT is subjected to a load or external stress, deformation may occur.

